

STORM KIT

ASSEMBLY INSTRUCTIONS



Thank you for purchasing ClimaPod Storm Kit.

ClimaPod Storm kit is designed to reinforce and support the overall strength of the greenhouse and lower potential risks of greenhouse damage due to severe weather conditions. It is recommended to set up included stainless steel ropes in accordance with assembly steps listed in these instructions. It is best to position the cables by the front gable of the greenhouse when storm and/or high winds are expected.

Even though our engineers have put time into designing and developing ClimaPod Storm Kit, neither Modular Organics LLC nor ClimaPod dealers provide any guarantee that ClimaPod Storm Kit will completely prevent risk of your greenhouse getting damaged and/or collapsing due to severe weather conditions. Please contact your local dealer or visit our website for more information about our products.

Contact Information:

Modular Organics LLC
ClimaPod Greenhouses

EMAIL: sales@climapod.com

Phone:360.674.2642

Website: www.climapod.com


Storm Kit Packing List



Part Name	Qty
3 Meters (9' 10 1/8") stainless steel rope	2
Wrench	1
Connecting plate	4
M6x10 crop-head bolt	4
M6 Nut	4
Adjuster	2
Threader	4
Threader clamp with bolts	4
Hook	4

Step 1



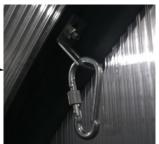



Step 2



Step 3

